

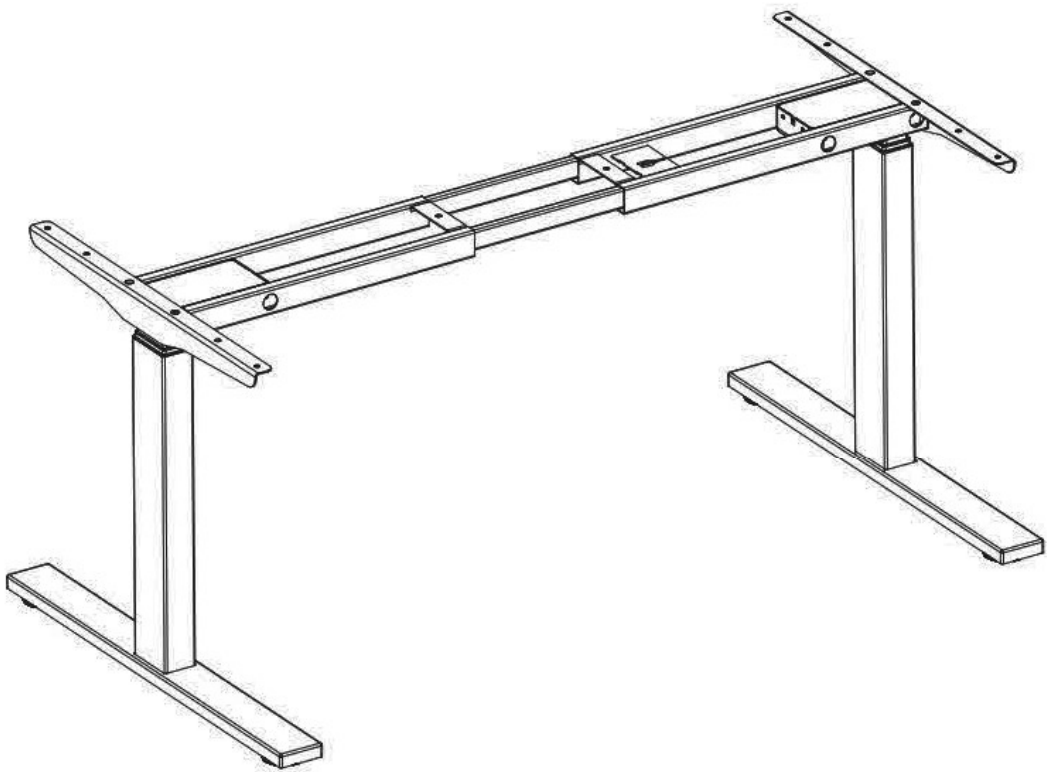


M320F Desk Frame Assembly Instructions

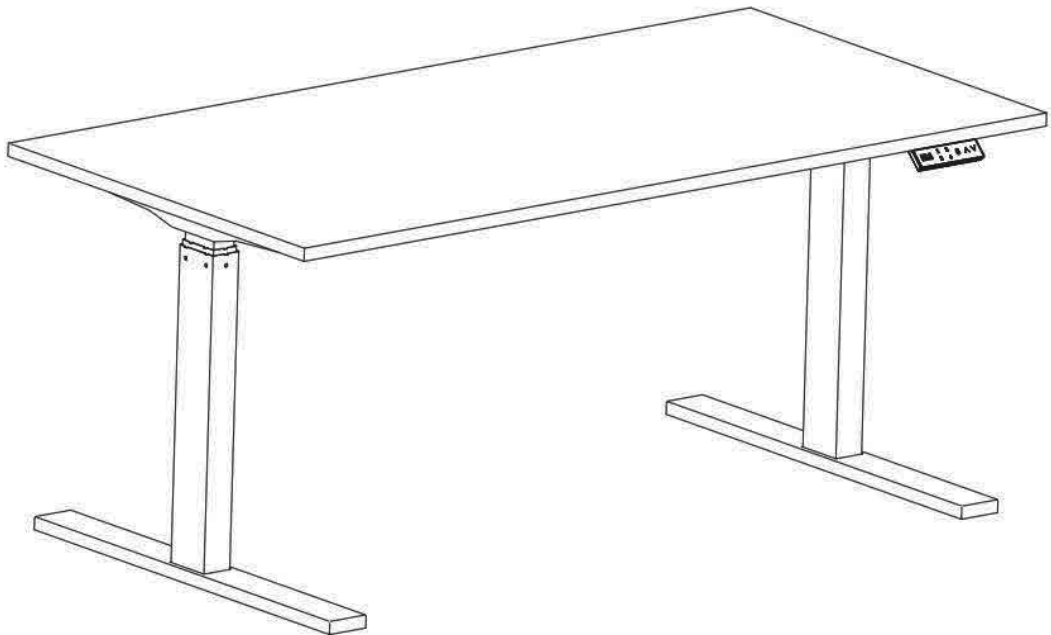


Instruction

Component parts

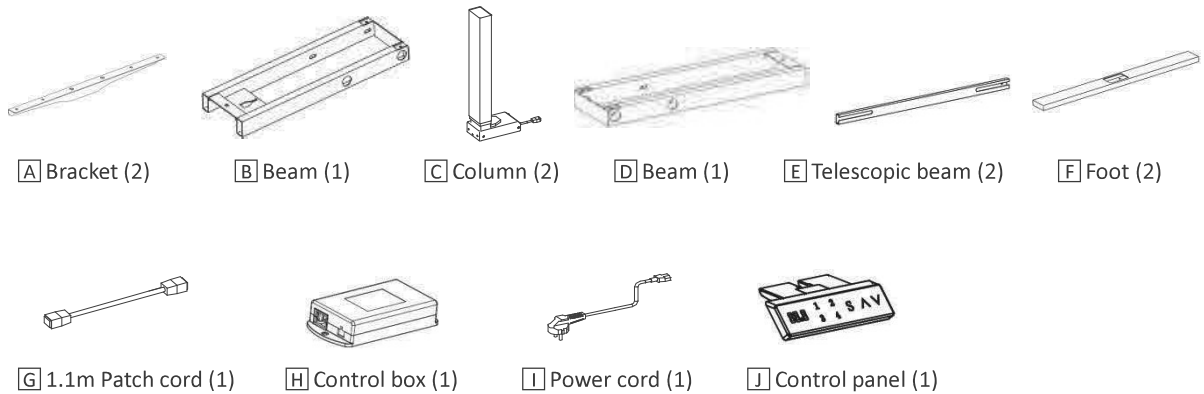


List of screws

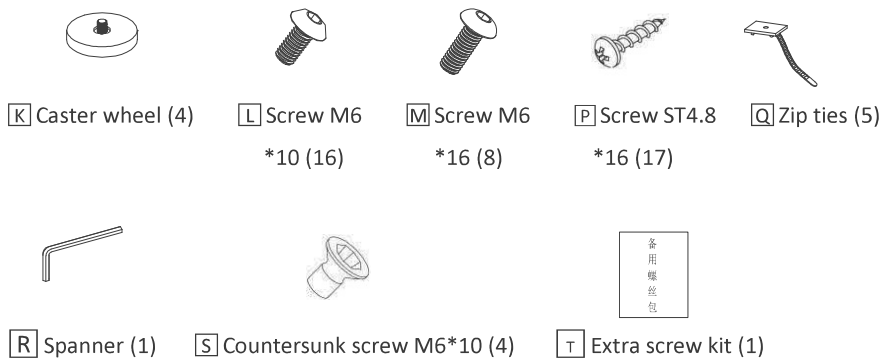



Extra tool for assembly:



Phillips screwdriver(Non offer)

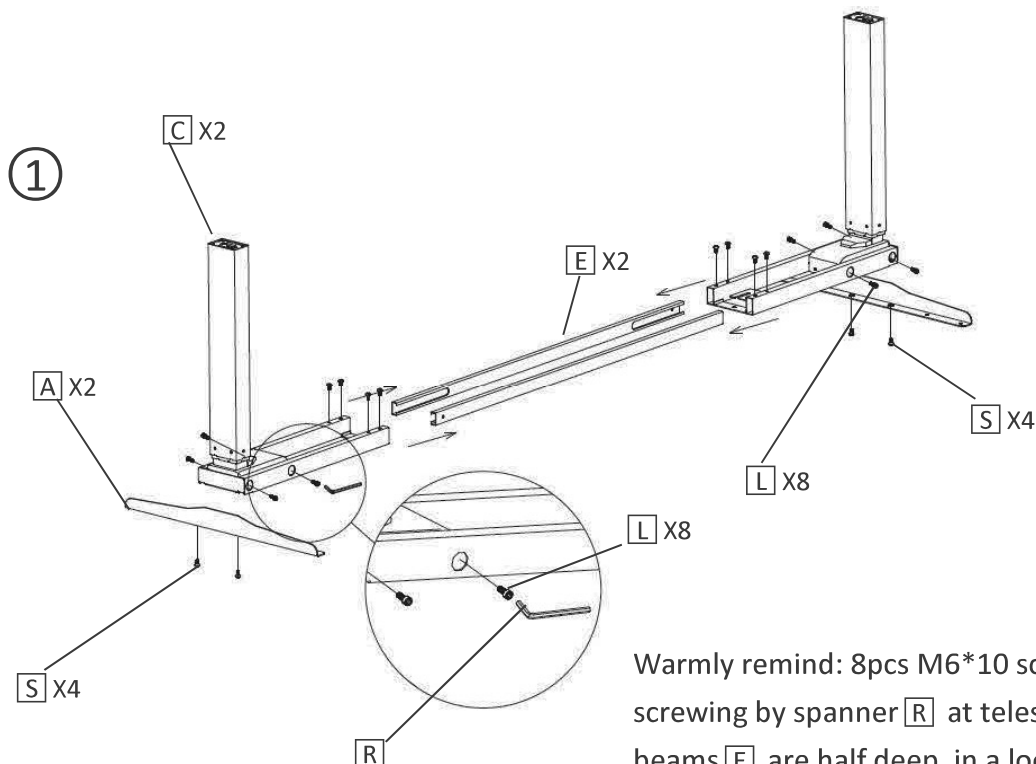

Warmly remind: 8pcs M6*10 screws **L** screwing by spanner **R** at telescopic beams **E** are half deep, in a loose state to facilitate the length of table frame.

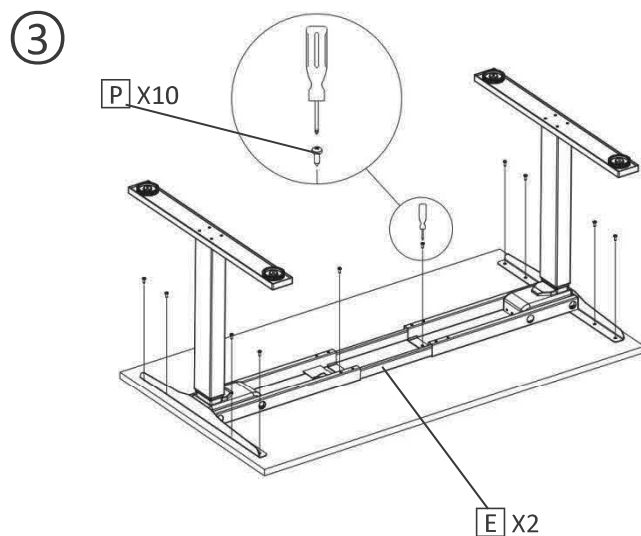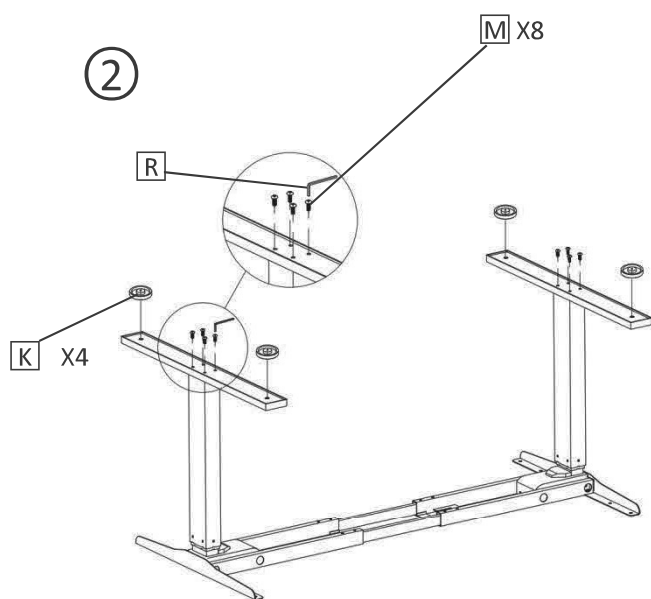

Warmly remind: After adjust the width of table frame, tighten the 8pcs M6*10 screw [L] with spanner [R] to fix the telescopic beams [E].

